



BY PRO-JECT AUDIO SYSTEMS

# INSTRUCTIONS FOR USE Pro-Ject Stereo Box S

Dear music lover,

thank you for purchasing a PRO-JECT AUDIO amplifier.

In order to achieve maximum performance and reliability you should study these instructions for use carefully.

 


*Warning of a hazard for the user, the unit or possible misuse.*



*Important notice.*

## Connectors

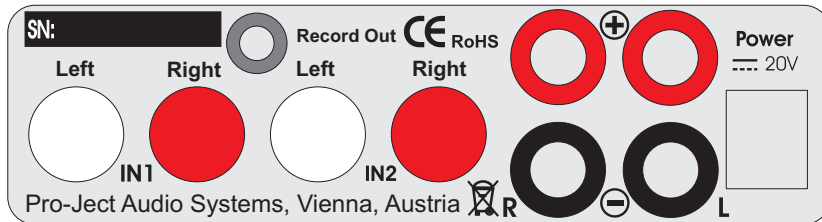

*Make all connections whilst the amplifier is disconnected from the power supply.*

*Take care to connect the left and right channels correctly. The right channel is usually marked red, the left channel black or white.*



*The red speaker terminals carry the positive signal (+), the black speaker terminals the negative signal (-). Make sure the polarity of the connection is correct at each end of the cables.*

*Only connect one loudspeaker with an impedance not less than 4 ohms per channel.*

*Never use any other power supply than the one supplied with the unit.*

## Inputs

Line level sources such as CD player radio or TV can be connected to the input sockets marked **IN1** or **IN2**.

## Connection to the speakers

The output terminals accept loudspeaker cables terminated with 4mm Ø Banana plugs, spades connectors or naked wire.

## Record output, connecting a headphone amplifier

**Record Out** connects an analogue record device ore a Pro-Ject Head Box headphone amplifier.

 



*Record Out provides a fixed output level.*

## Mains power connection

The unit is supplied with a power supply suitable for your country's mains supply. Check the label before connecting to ensure compliance with the mains rating in your house. Connect the low voltage plug from the power supply to the **Power 20V** socket before connecting the power supply to the mains.

## Remote control

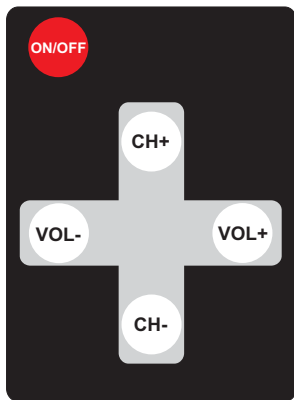 


 turns the unit on or back into standby

 and  adjust the sound volume

 and  select the inputs

## Front panel controls

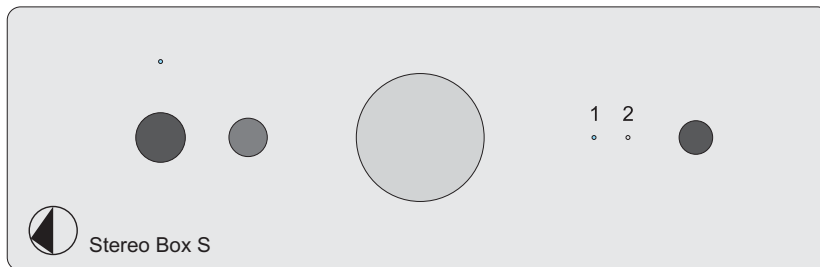

### To switch on from standby or to standby

The push button (press and hold to switch into standby mode) on the left hand side of the front panel turns the unit on or back into standby. The blue LED above the stand-by push button shows that the unit is switched on.

### Input selector

After the unit is powered on, pressing the push button on the right, selects the **In 1** and **In 2** inputs in turn.

The optional input expander Pro-Ject Switch Box S provides three more inputs. For further details please see the user guide of the Pro-Ject Switch Box S.

### Volume

Adjust the volume to the desired level, using the large knob on the front panel.

## Replacing batteries

Proceed as follows:

- Unlock and slide open the battery case cover
- Replace the battery.  
Make sure the battery is the right way round !
- Close the battery case cover



Battery type: 1 x CR2032 / 3V or 1 x CR2025 / 3V



*Do not dispose the batteries as ordinary domestic refuse. Please dispose your exhausted batteries at the appropriate collection sites - usually located at supermarkets and drugstores.*

## Technical specifications Pro-Ject Stereo Box S

Power output:	2 x 25W/37W at 8 ohms/4 ohms (both channels driven)
Frequency response:	5Hz - 20kHz (+0dB, -0,5dB)
Channel separation:	>65dB at 20kHz
Noise floor:	>90dB (A weighted)
THD:	<0,07% at 15W
Gain:	31dB
Line-level inputs:	2 pair RCA/phono sockets
Input sensitivity:	350mV
Input impedance:	50kohms
Record Out:	3-pole 3,5mm co-axial jack
Speaker connectors:	4mm Ø banana plugs, spades connectors or naked wire
Outboard power supply:	20V/3A DC, suitable for your country's mains supply
Power consumption:	3A DC, <1W in standby
Replacement battery remote control:	1 x CR2032 / 3V or 1 x CR2025 / 3V
Dimensions W x H x D (D with sockets):	103 x 36 x 104 (122)mm
Weight:	720g without power supply

## Service

Should you encounter a problem which you are not able to alleviate or identify, please contact your dealer for further advice. Only when the problem cannot be resolved there should the unit be sent to the responsible distributor in your country.

## Warranty



*The manufacturer accepts no responsibility for damage caused by not adhering to these instructions for use. Modification or change to any part of the product by unauthorized persons release the manufacturer from any liability over and above the lawful rights of the customer.*

PRO-JECT is a Registered Trademark of H. Lichtenegger.

This guide was produced by: Audio Trade GmbH  
Copyright © 2011. All rights reserved.

The information was correct at the time of going to press. The manufacturer reserves the right to make changes to the technical specification without prior notice as deemed necessary to uphold the ongoing process of technical development.