



BY PRO-JECT AUDIO SYSTEMS

INSTRUCTIONS FOR USE Pro-Ject Stereo Box DS

Dear music lover,

thank you for purchasing a Pro-Ject Audio Systems' amplifier.

In order to achieve maximum performance and reliability you should study these instructions for use carefully.



Warning of a hazard for the user, the unit or possible misuse



Important notice


Safety instructions

AC outlet voltages vary from country to country. Before connecting to the mains, make sure that the voltage in your area meets the voltage requirements printed on the power supply. The power cord is used to disconnect the unit from the mains. Make sure that the power cord is easily accessible at all times.



Avoid letting liquids enter the device or the power supply. Never place any item containing liquid, such as a flower vase on or near the device. Never spill any liquid on the device or the power supply. Never place any naked flame sources, such as lighted candles on or near the device. The product shall not be used in damp or wet locations, next to a bathtub, sink, swimming pool or any other similar conditions

Connectors

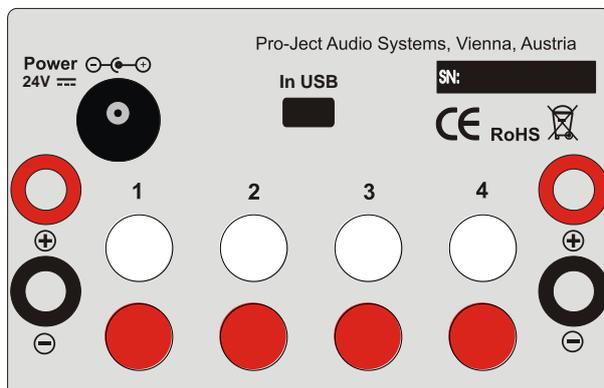

Make all connections, **except the connection to the computer**, whilst the unit is disconnected from the power supply.

Take care to connect the left and right channels correctly. The right channel is usually marked red, the left channel black or white.



The red speaker terminals carry the positive signal (+), the black speaker terminals the negative signal (-). Make sure the polarity of the connection is correct at each end of the cables.

Only connect one loudspeaker with an impedance not less than 4 ohms per channel.

Never use any other power supply than the one supplied with the unit.

Inputs

Line level sources such as CD player radio or TV can be connected to the input sockets marked **1 - 4**.

USB input

A computer, used as a source, can be connected to the USB input.


Connection to the speakers

The output terminals accept loudspeaker cables terminated with 4mm Ø Banana plugs, spades connectors or naked wire.

Mains power connection

Connect the low voltage plug from the power supply to the **24V=** socket of the amplifier before connecting the power supply to the mains.

Remote control

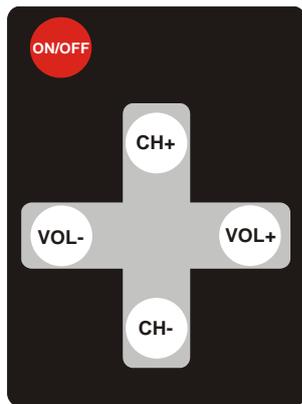

short press turns the unit on, long press takes it back into standby. Powered on, a short press activates and deactivates mute




and adjust the sound volume



and select the inputs

Front panel controls

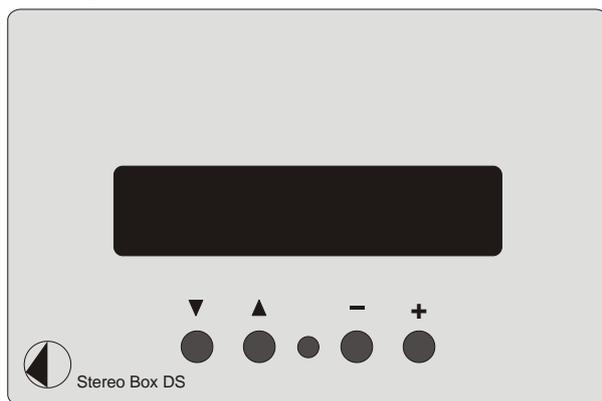

To switch on from standby or to standby

▼ on the front turns the unit on or back into standby. The display shows **STANDBY** when the unit is in standby. While switching off, the unit saves the settings for input, volume and mute, to be set automatically after next power on.

Dimming the display

Press and hold the buttons ▲ and + will change the display brightness - full, half and one third.

Input selector

Pressing the **Input Select** buttons ▲ and ▼ selects the inputs 1 - 4 in turns. The selected input will be shown in the display.

Volume

Adjust the volume (95 steps) to the desired level using the buttons - and +. The volume level will be shown in the display. -95dB indicates min., 00dB max..

Mute



While the unit is powered on, activates and deactivates Mute



Connecting to a Computer

Connect the USB-input of the amplifier (unit must be switched on) to a free USB-socket on your computer and turn it on/make sure it is powered on. The amp will be automatically recognised by the computer. There is no need to install a driver manually.



Please note: Connection should be made to an USB-socket of your computer directly. Connecting to USB-hubs or switches can cause problems.

Potential incorrect use and fault conditions

No signal on one or both channels:

No connection between headphone and headphone amplifier or amplifier. This could be due to a faulty plug, broken wire or solder joint or simply loose plug/socket connection.

Headphone does not work:

Headphone volume control is at minimum.

Amplifier Tape-Monitor circuit is not activated.

Replacing batteries

Proceed as follows:

- Unlock and slide open the battery case cover
- Replace the battery.
Make sure the battery is the right way round !
- Close the battery case cover



Battery type: 1 x CR2032 / 3V or 1 x CR2025 / 3V



Do not dispose the batteries as ordinary domestic refuse. Please dispose your exhausted batteries at the appropriate collection sites - usually located at supermarkets and drugstores.

Technical specifications Pro-Ject Stereo Box DS

Power output:	2 x 35W/60W at 8 ohms/4 ohms (both channels driven)
Frequency response:	20Hz - 20kHz (-0,1dB, +0,2dB)
Channel separation:	>65dB at 20kHz
Noise floor:	>100dB (A weighted)
THD:	0,1% at 10W
Gain:	33dB
Line-level inputs:	4 pairs RCA/phono sockets
Input sensitivity:	350mV
Input impedance:	100kohms
USB-input:	Mini B socket.
USB signal:	Digital serial data protocol USB 1.1
D/A converter:	Texas Instruments PCM2706. 16-Bit /48kHz Delta Sigma, 128-times oversampling
Supported audio format:	PCM (LPCM). No support for formats like Dolby® Digital or DTS™
Sampling rates:	44,1kHz and 48kHz
Speaker connectors:	4mm Ø banana plugs, spades connectors or naked wire
Outboard power supply:	24V/5A DC, suitable for your country's mains supply
Power consumption:	5A DC, <1W in standby
Replacement battery remote control:	1 x CR2032 / 3V or 1 x CR2025 / 3V
Dimensions W x H x D (D with sockets):	103 x 72 x 104 (122)mm
Weight:	670g without power supply

Service

Should you encounter a problem which you are not able to alleviate or identify despite the above information, please contact your dealer for further advice. Only when the problem cannot be resolved there should the unit be sent to the responsible distributor in your country.

Warranty



The manufacturer accepts no responsibility for damage caused by not adhering to these instructions for use. Modification or change to any part of the product by unauthorized persons, release the manufacturer from any liability over and above the lawful rights of the customer.

Copyright, trademarks

Pro-Ject Audio Systems is a Registered Trademark of H. Lichtenegger.

This guide was produced by: Pro-Ject Audio Systems
Copyright © 2015. All rights reserved.

The information was correct at the time of going to press. The manufacturer reserves the right to make changes to the technical specification without prior notice as deemed necessary to uphold the ongoing process of technical development.

Windows XP®, Windows Vista®, Windows 7® and Windows 8® are trademarks of the Microsoft group of companies. Mac® and Mac OS® are trademarks of Apple Inc., registered in the U.S. and other countries. Dolby® is a registered trademark of Dolby Laboratories. DTS™ is a registered trademark of DTS, Inc..